LOWER OVEN PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

30" BUILT−IN ELECTRIC
DOUBLE OVEN
CONVECTION−UPPER
SELF−CLEAN (GOLD LINE)

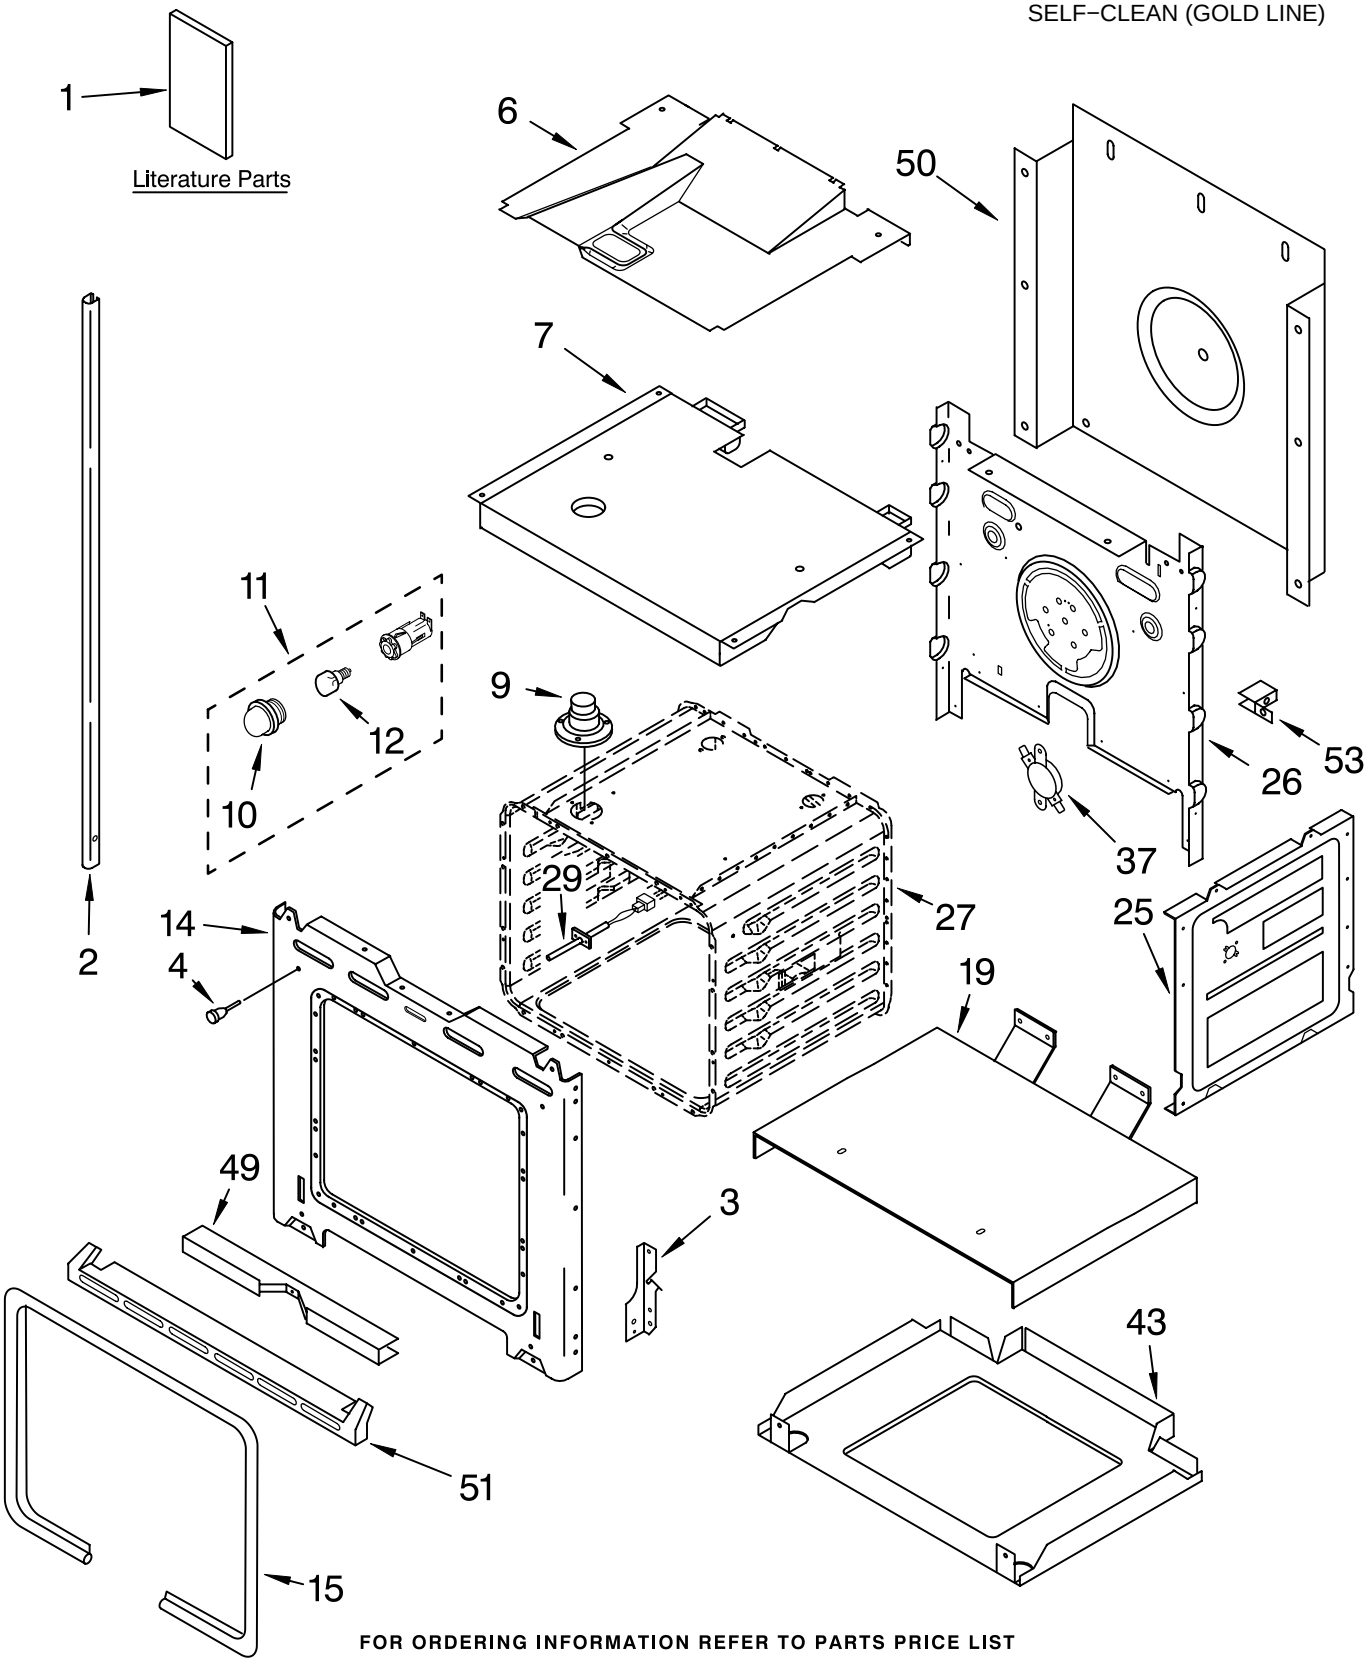

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER OVEN PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Literature Parts
	LIT8300654	Installation Instructions
	LIT8300668	Use & Care Guide (Oven)
	LIT4451887	Tech Sheet (Oven)
	LIT4449237	Cookbook, WP Conv.
	LIT3191638	Safer Cooking Tips
2		Trim, Side
	4450851	RH White
	4450854	LH White
	4452122	RH Biscuit
	4452123	LH Biscuit
	4450850	RH Black
	4450853	LH Black
	4449747	Screw
3		Hinge Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
6	4452201	Divider, Vent
	4449809	Screw
7	4455286	Top, Chassis
	4449809	Screw
9	4452158	Tube, Vent
	3196176	Screw
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
14	4455612	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455382	Gasket, Door
19	4451478	Support, Insulation
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4455636	Sensor
	4449154	Screw
37	4451442	Thermostat (TOD) (Temp.) SPST
	4449809	Screw
43	4455530	Base, Chassis
	4449809	Screw
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
51		Trim, Bottom
	4448478	White
	4448477	Black
	4452415	Biscuit
		Screw
53	4449845	Support, Bracket
	4449809	Screw

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316	Insulation, Wrap
4450365	Insulation, Back

UPPER OVEN PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

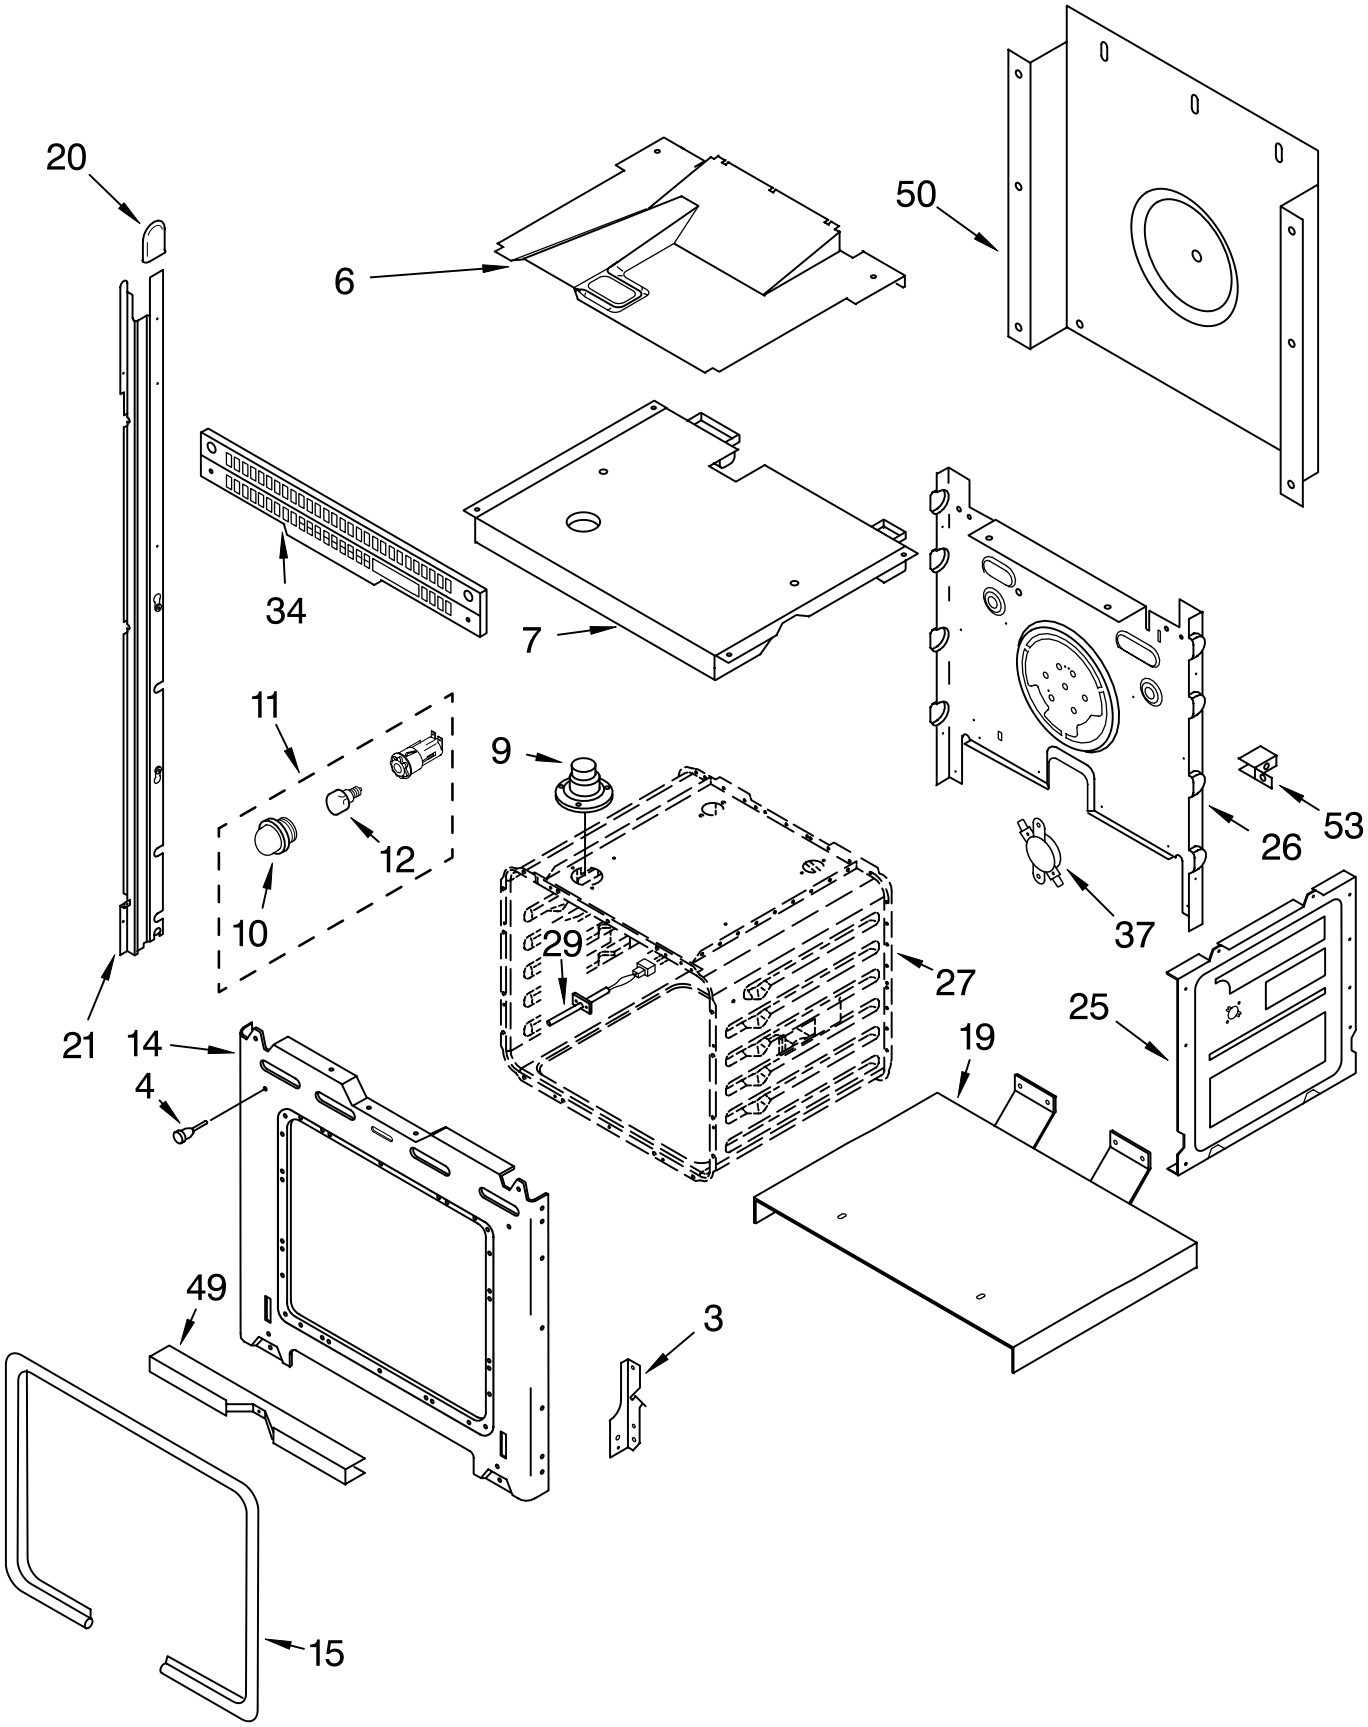

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
3		Hinge Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
6	4452201	Divider, Vent
	4449809	Screw
7	4455286	Top, Chassis
	4449809	Screw
9	4452158	Tube, Vent
	3196176	Screw
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
14	4455612	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455382	Gasket, Door
19	4451478	Support, Insulation
	4449809	Screw
20	4451605	Cap, Spacer
21		Rail, Side
	4450581	Right Side
	4450582	Left Side
	4448444	Grommet
	4449154	Screw
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4455636	Sensor
	4449154	Screw
34	4452267	Vent, Center
	3400832	Screw
37	4451442	Thermostat (TOD) (Temp.) SPST
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
53	4449845	Support, Bracket
	4449809	Screw

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

	4449316	Insulation, Wrap
	4450365	Insulation, Back

OVEN DOOR PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

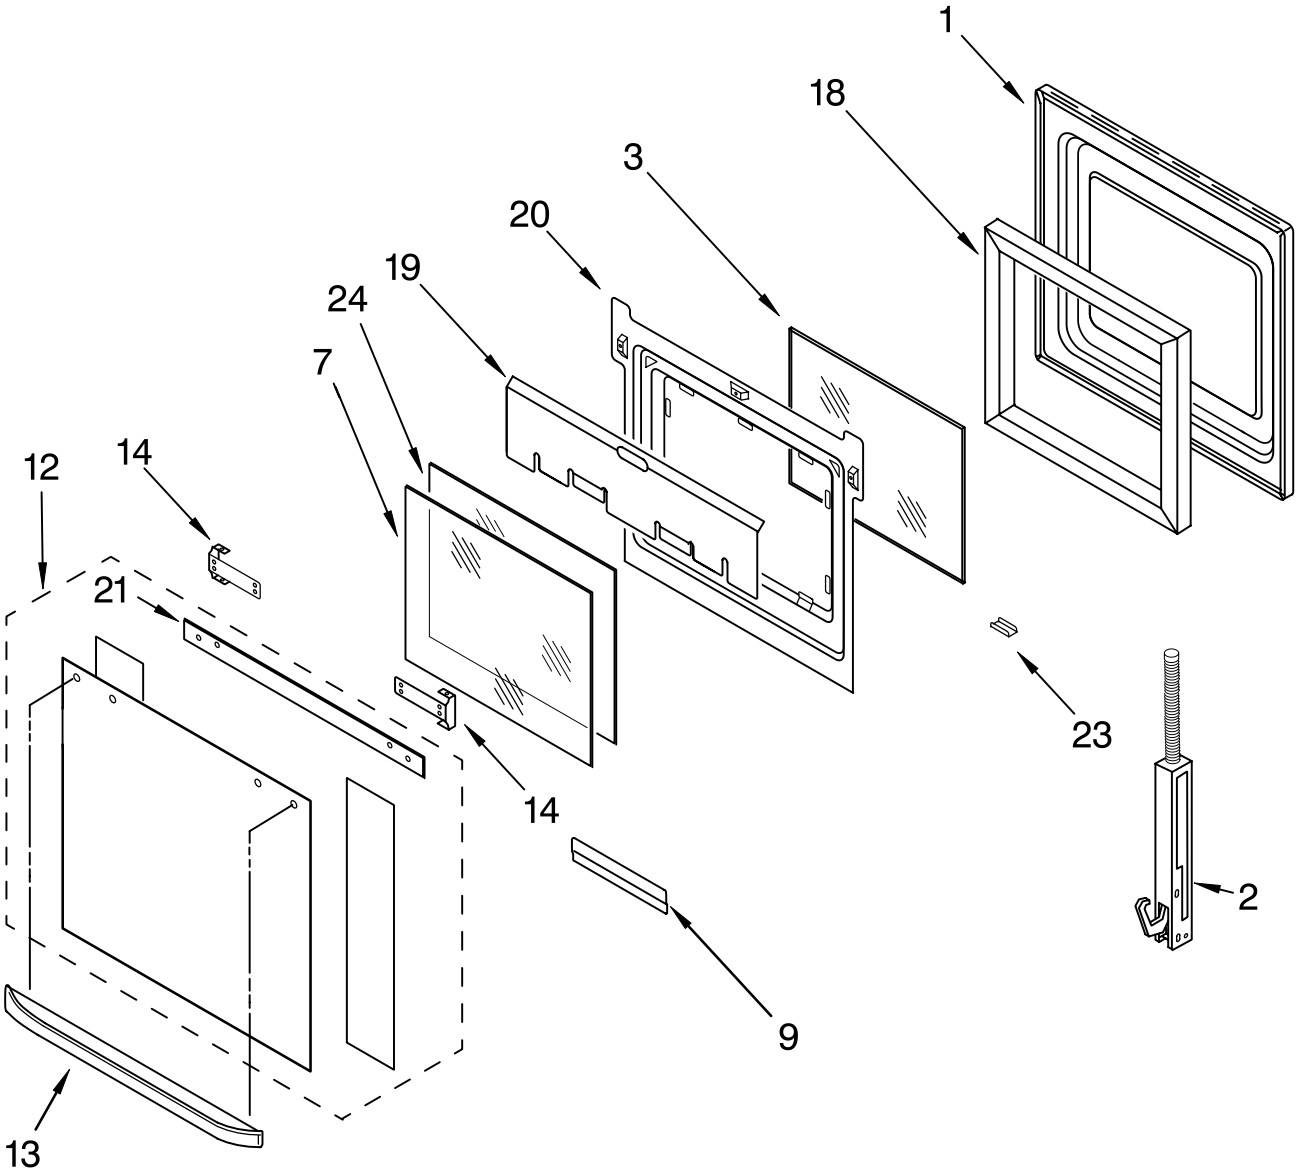

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4455618	Door Liner
2		Hinge, Door
	8300571	Right Hand
	8300572	Left Hand (White, Black & Biscuit Models)
	8300573	Right Hand
	8300574	Left Hand (Black Stainless Model)
	4449743	Screw
3	4449259	Glass, Inner
7	4449263	Glass, Inner
9	4451668	Retainer, Glass
	4449809	Screw
12		Door Glass Assy
	4452066	White
	4452065	Black
	4452859	Biscuit
	4452479	Black Stainless
13		Door Handle
	4448855	White
	4448854	Black
	4452860	Biscuit
14	4450813	Bracket, Handle
	4451040	Screw
18	4451722	Insulation, door
19	4450362	Shield, Heat
	4449809	Screw
20	8300778	Retainer, Glass
	4449809	Screw
21	8300820	Seal, Door Top
23		Retainer, Clip
	4450864	White
	4450863	Black
24	4455257	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LATCH PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

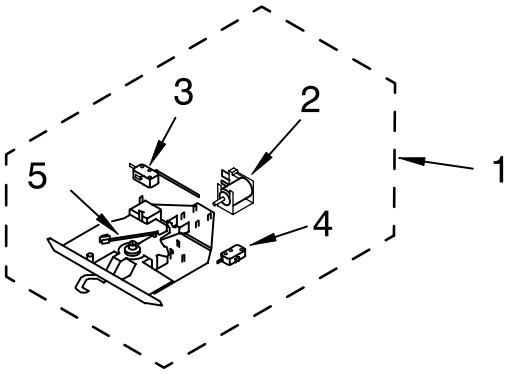

Illus. No.	Part No.	DESCRIPTION
1	4451896	Latch Assembly
2	4452224	Solenoid
3	4452312	Switch, Micro
4	4451426	Switch, Micro
5	4451537	Spring, Latch

INTERNAL OVEN PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

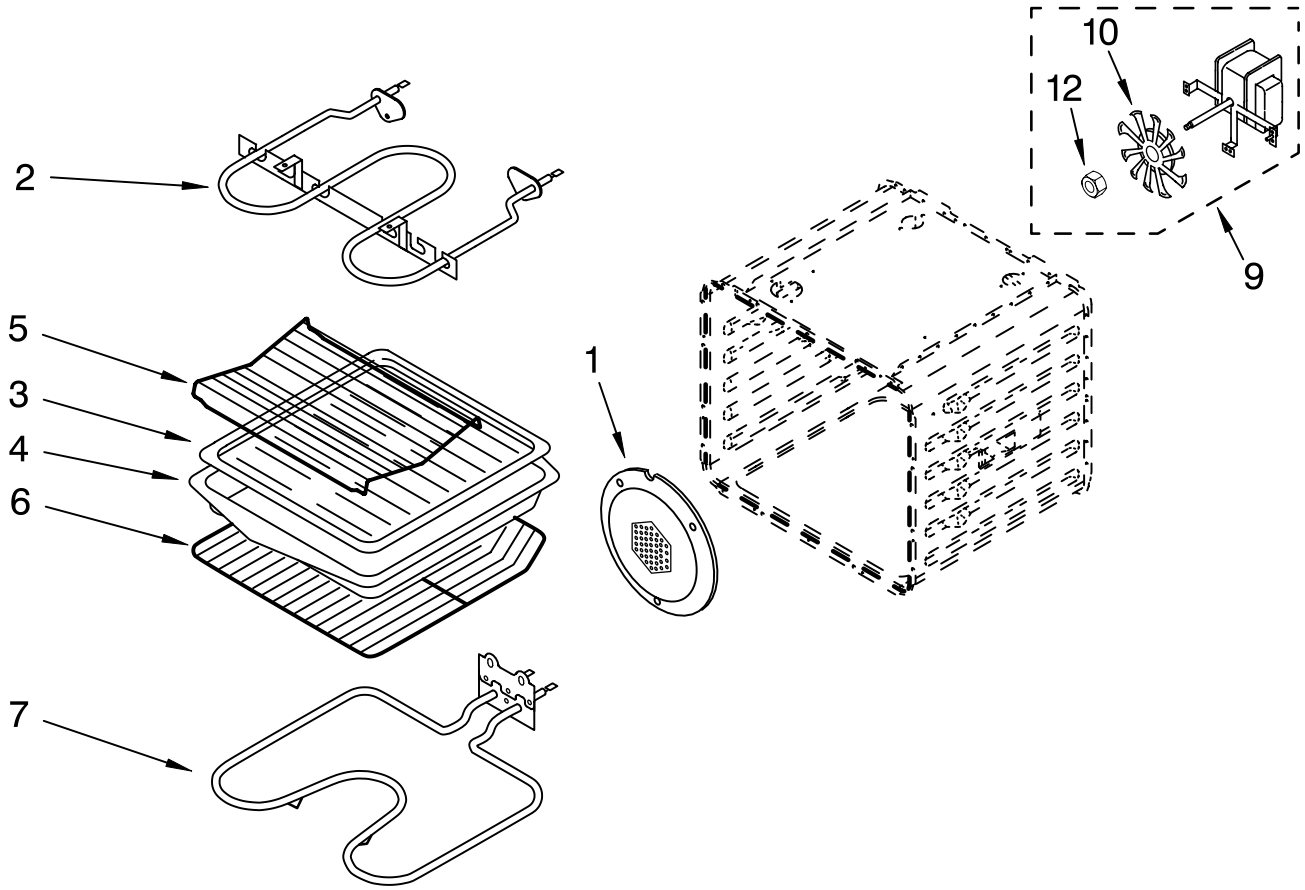

Illus. No.	Part No.	DESCRIPTION
1	4448988	Cover, Fan
	4449154	Screw
2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
5	3181534	Rack, Roasting
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw
9	4451583	Fan, Convection
	4449154	Screw
10	4452226	Blade, Fan
12	4452227	Nut

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

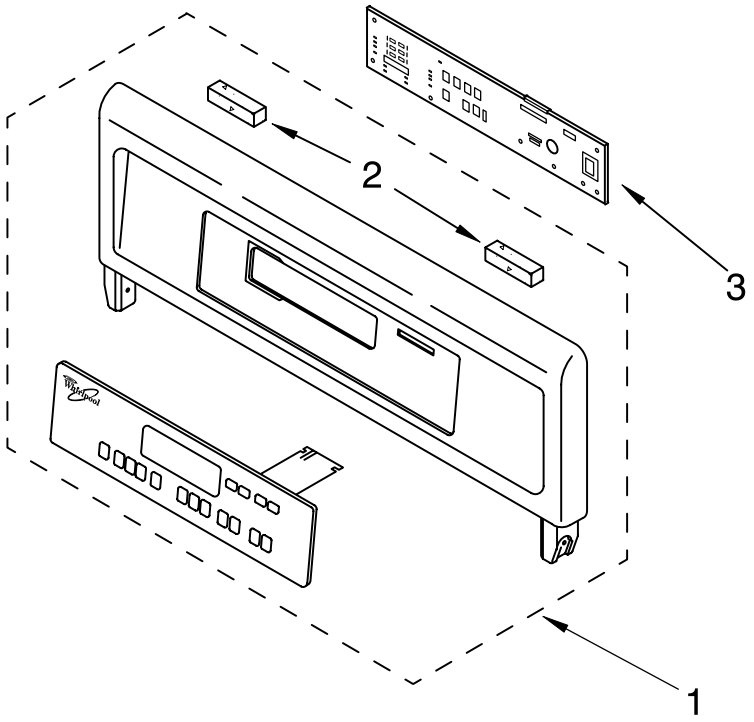

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Control Panel Assy W/Membrane, Switch
	8300441	White
	8300440	Black
	8300442	Biscuit
	3192690	Insulator, Membrane Switch
	8281179	Screw
2	4451034	Gasket, Control Panel
3	4452890	Microcomputer
	4449745	Screw

TOP VENTING PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

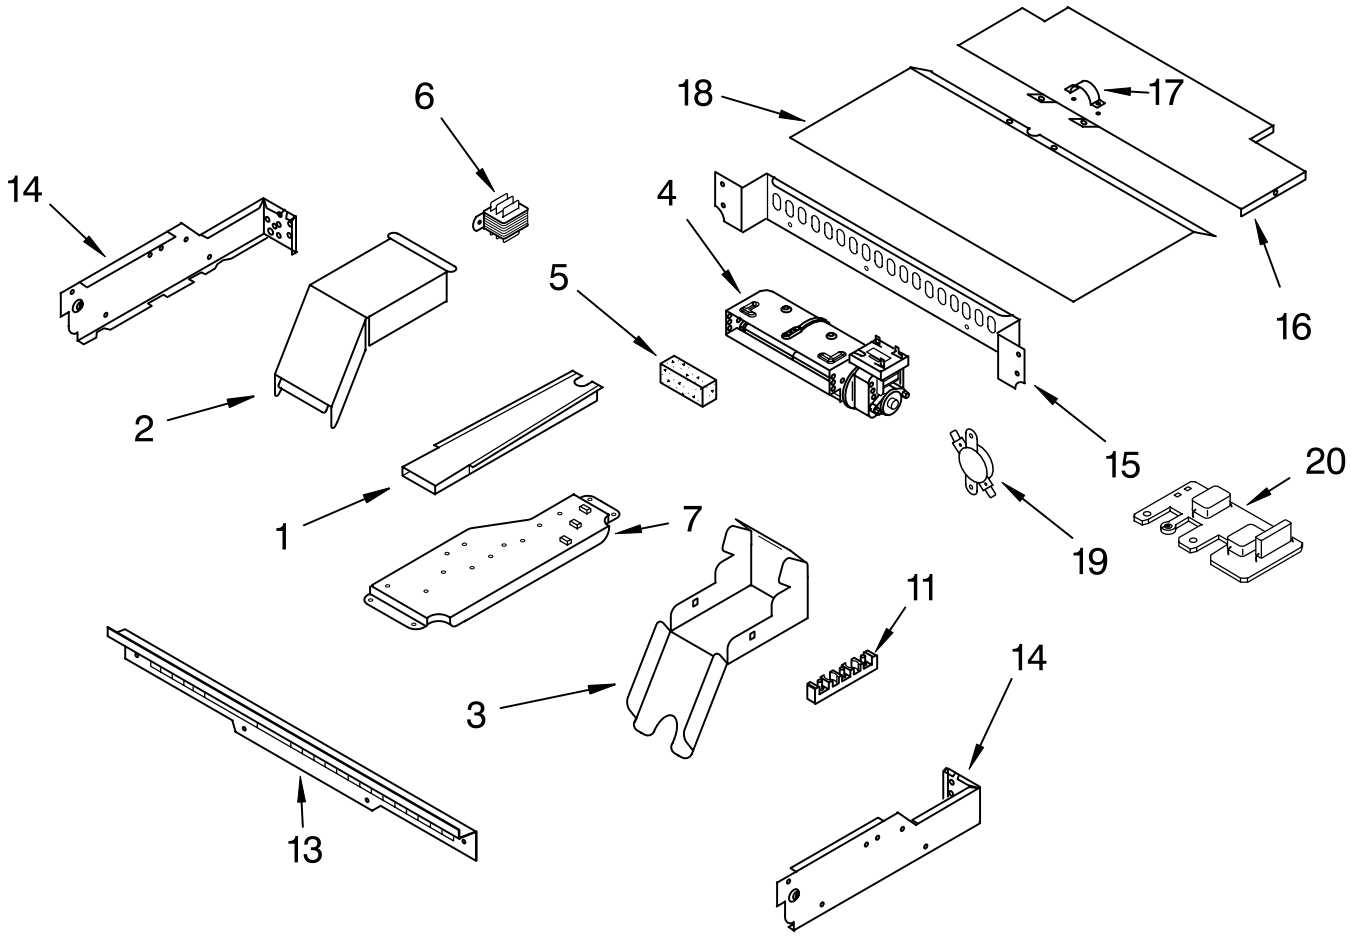

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4451759	Assembly,
2	4455178	Elbow, Vent Top
3	4455177	Elbow, Vent Btm
4		Blower
	6610168	45MM Lower Oven
	4455334	60MM Upper Oven
	4455352	Bracket, Blower
5	4451758	Foam, Block
6	8300642	Transformer, Control
7	4451789	Plate, Mounting
	4455191	Plate, Service
11	4449868	Block, Terminal
	3400080	Screw
13	4448549	Vent,
		(Control Panel)
	4450038	Screw
14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
	4449154	Screw
15	4452244	Back, Control
	4449809	Screw
16	4450551	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp
	4449809	Screw
	112432	Nut
18	4452367	Cover, Top Front
	4449809	Screw
19	4452223	Thermostat, Oven
20	4451985	Suppressor

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models:GBD307PDQ7, GBD307PDB7, GBD307PDS7, GBD307PDT7
(Designer White) (Black) (Black Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION

PAINT, TOUCH−UP (1/2oz.)

72017	White
261869	Cord Brown
72032	Black

PAINT, SPRAY

350930	White
261900	Citrine White
830864	Black

ADHESIVE

591014	Adhesive Loctite (1/3 oz.)
482338	Sealer, Silastic (3 oz.)

SPLICING WIRES−−25FT. LENGTH

242828	Wire (12 Ga. 150 c Black)
242820	Wire (14 Ga. 150 c Black)
242821	Wire (14 Ga. 150 c Blue)
242822	Wire (14 Ga. 150 c Brown)
242830	Wire (14 Ga. 200 c Brown)
242823	Wire (14 Ga. 150 c Green)
242824	Wire (14 Ga. 150 c Orange)
242829	Wire (12 Ga. 150 c Red)
242825	Wire (14 Ga. 150 c Red)
242831	Wire (14 Ga. 200 c Red)
242826	Wire (14 Ga. 150 c White)
242827	Wire (14 Ga. 150 c Yellow)
242832	Wire (14 Ga. 200 c Yellow)

WIRING HARNESS PARTS

4451926	Harness, Wire (Latch, Lower)
4449809	Screw
4455737	Harness, Wire (Main)
4450953	Conduit, Double
4450800	Screw
4448664	Clamp
4449809	Screw
112432	Nut
4452222	Spacer, Harness
4454835	Tie, Cable
4451761	Support, Wiring
4454842	Tie, Cable

Miscellaneous

814381	Pin Hinge Kit
4448950	Screw, Install (4)